




## **STERLING 2994-** \_\_\_**A**

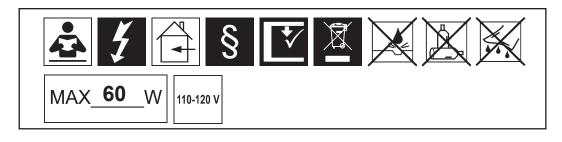

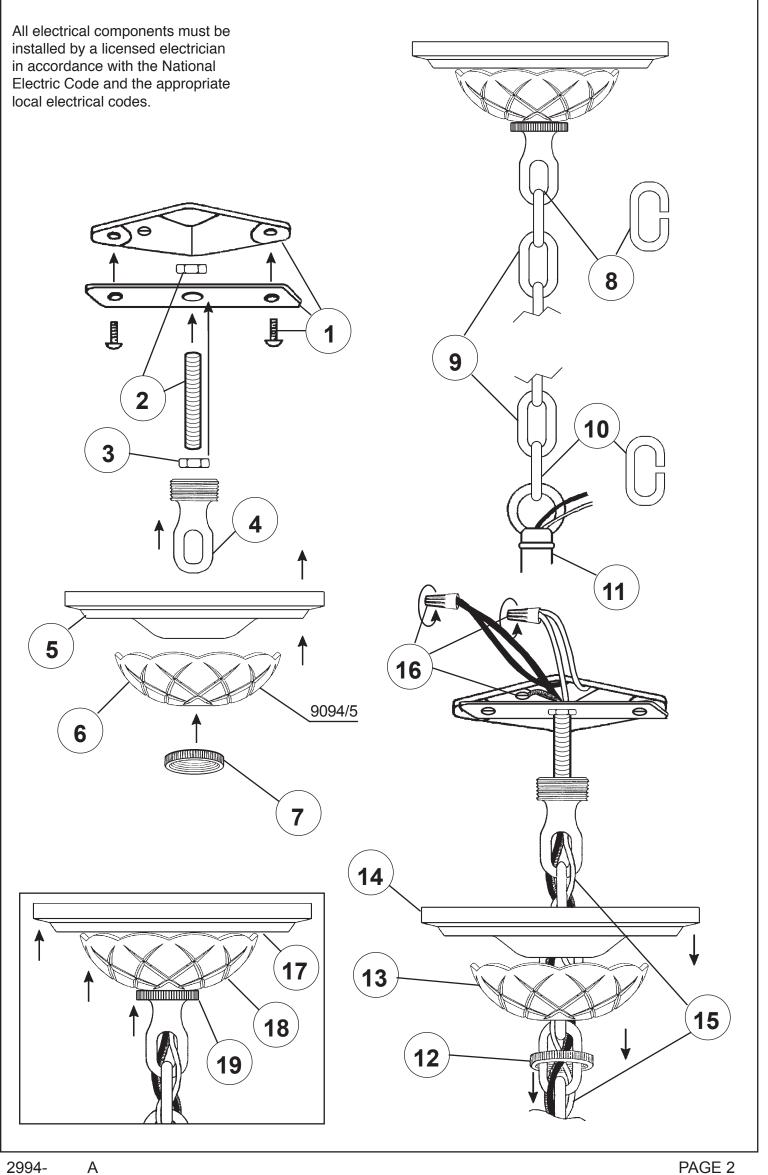







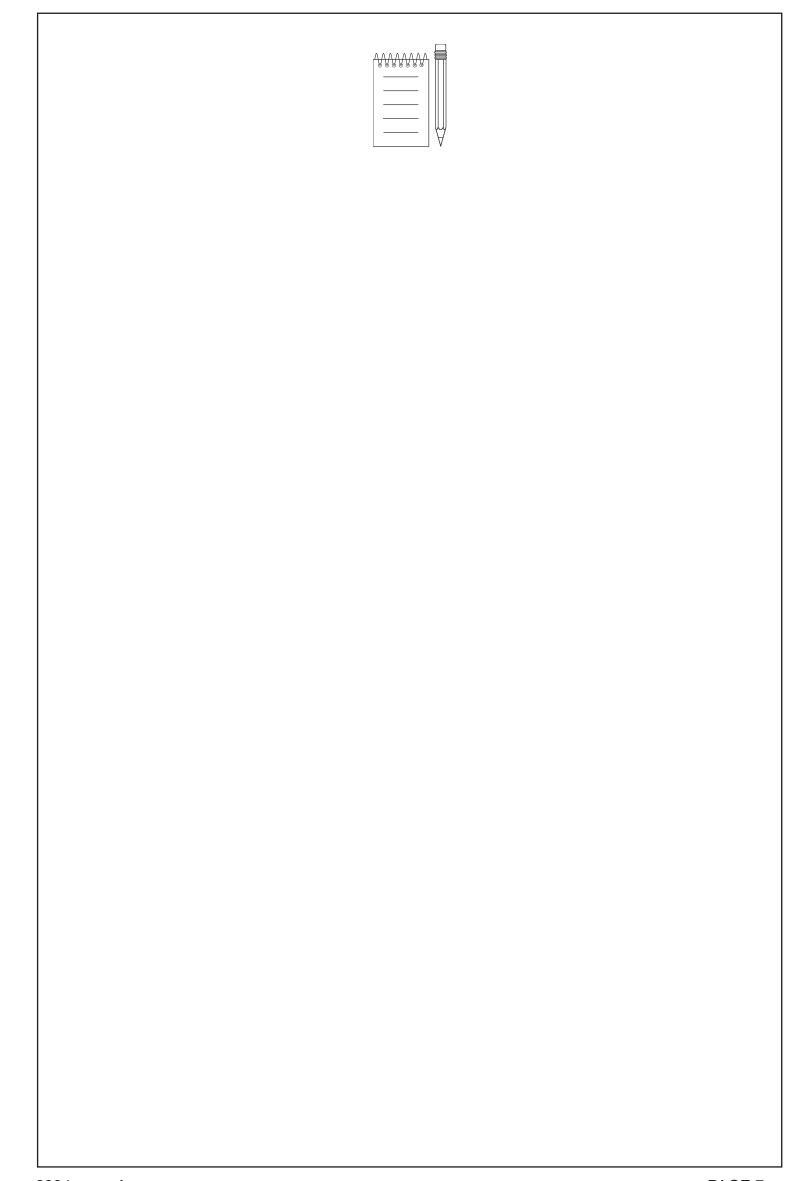

2994-\_\_\_A

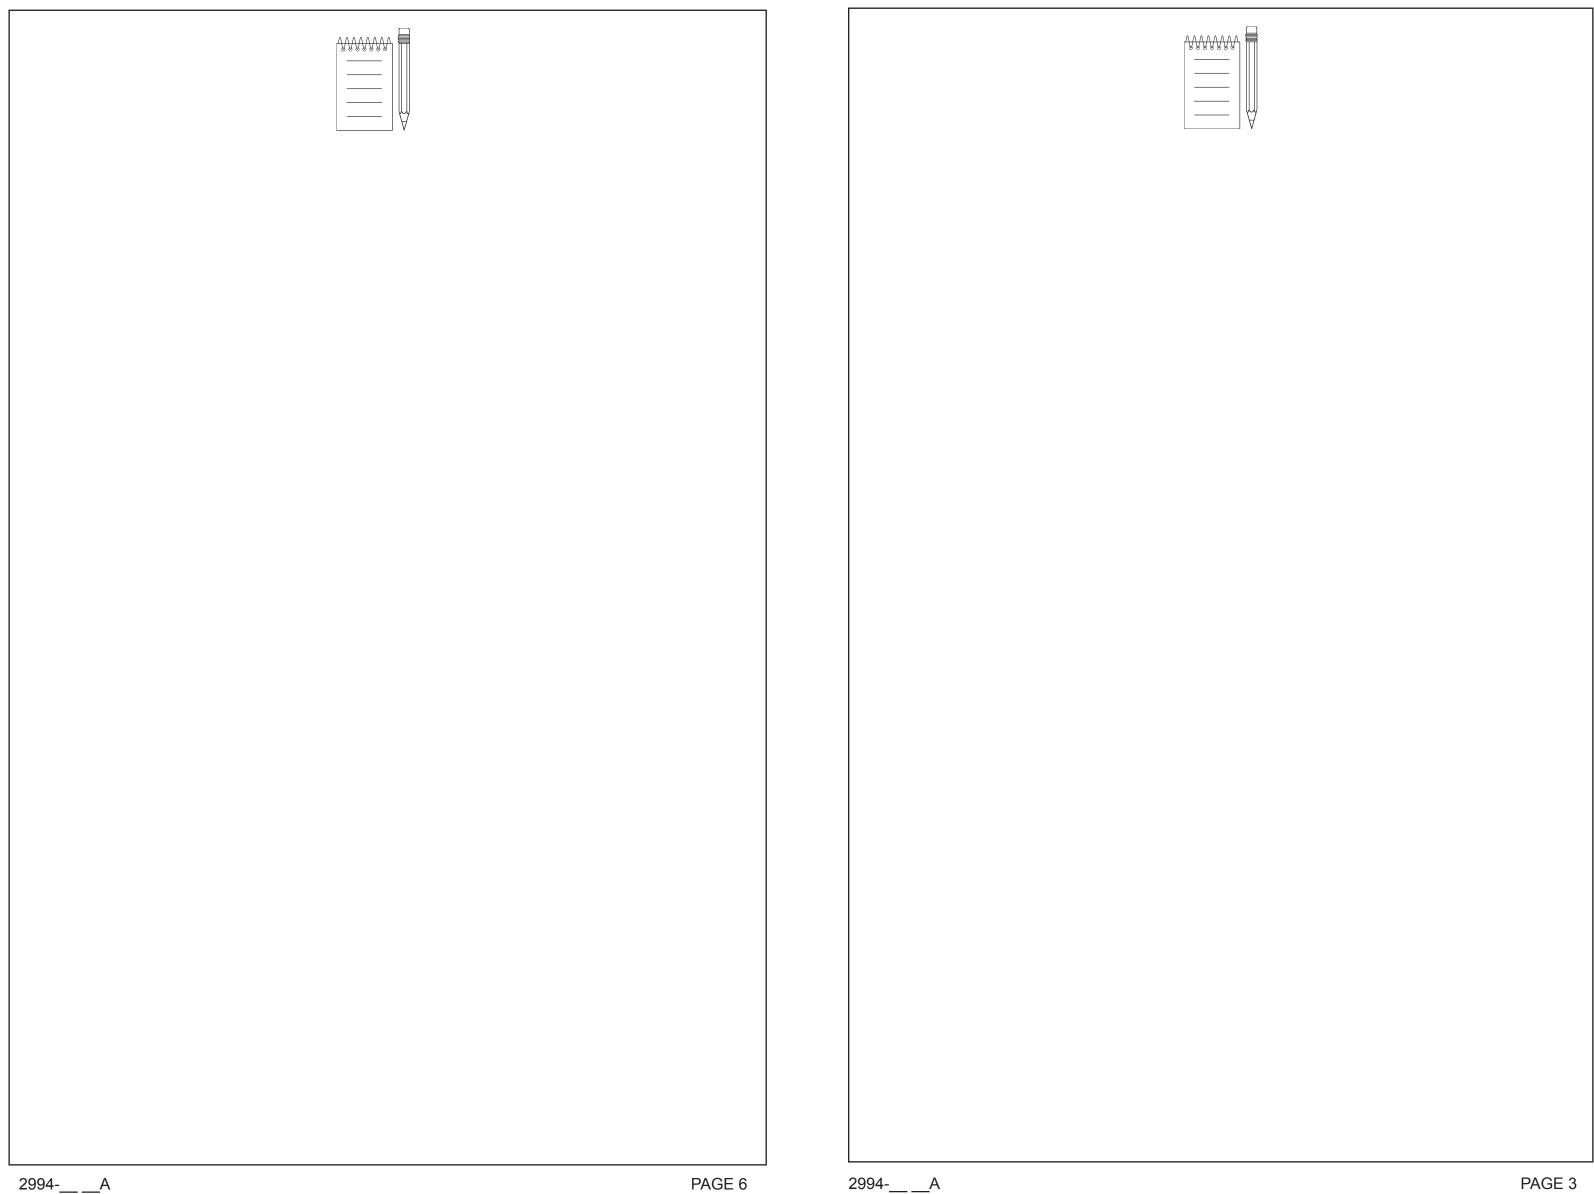

2994-\_\_\_A PAGE 6

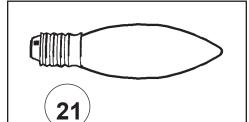

You will need 6 - B10 25 Watts Recommended 60 Watts Max

Install bulbs and be sure to test fixture BEFORE trimming.

20 Install arms into washer. Line up holes in arms with stud in washer. Use lock washer and nut to secure arms in place.

Connect ground wire in each arm to ground wire in center column. NO MORE THAN 5-WIRES PER WIRE NUT. Use electrical tape to secure wire nuts.

Connect white arm wires to neutral column wire (ribbed or marked is neutral).

Connect black arm wires to the power wire in column.

Carefully press wires as close as possible to the underside of washer.

Attach metal enclosure with nut provided. Attach #9319 glass with rosette and ball.

