




## **STERLING 2997-** \_\_\_ S

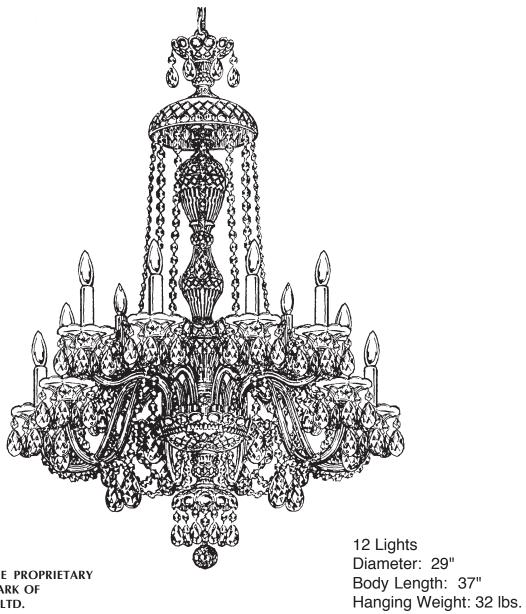



THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF SWAROVSKILIGHTING, LTD.

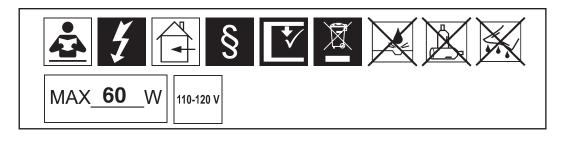




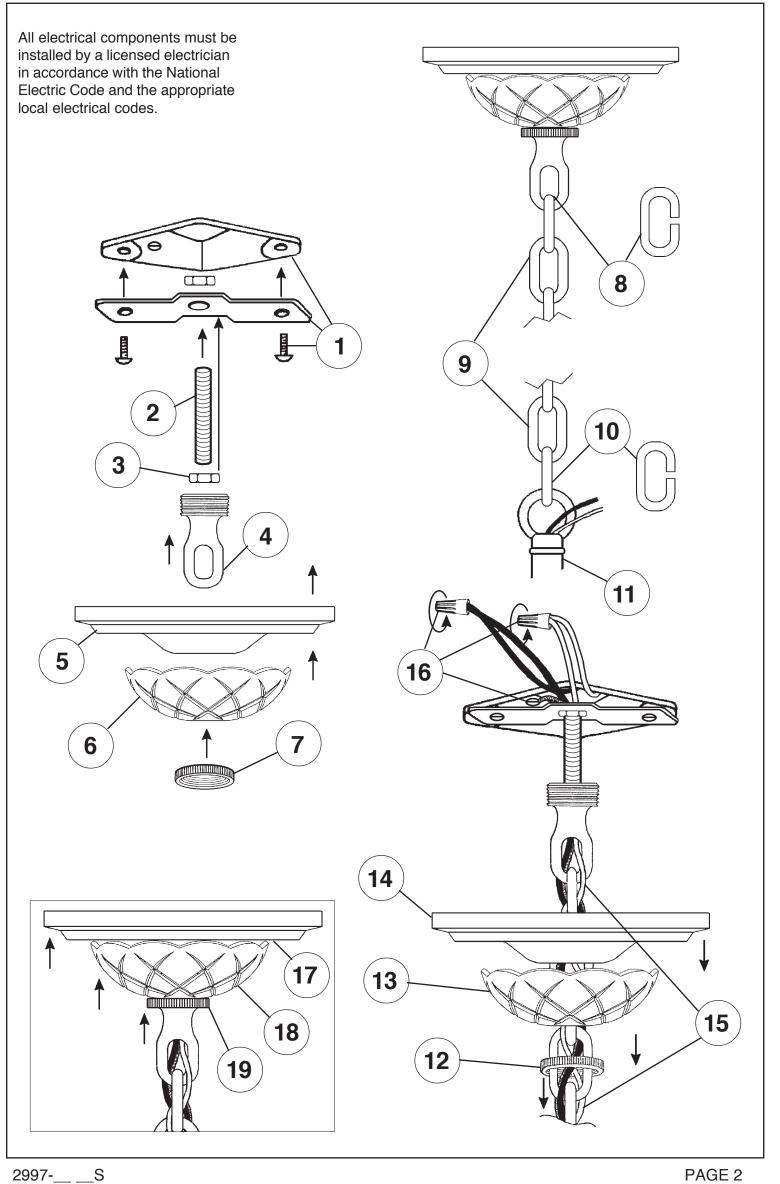

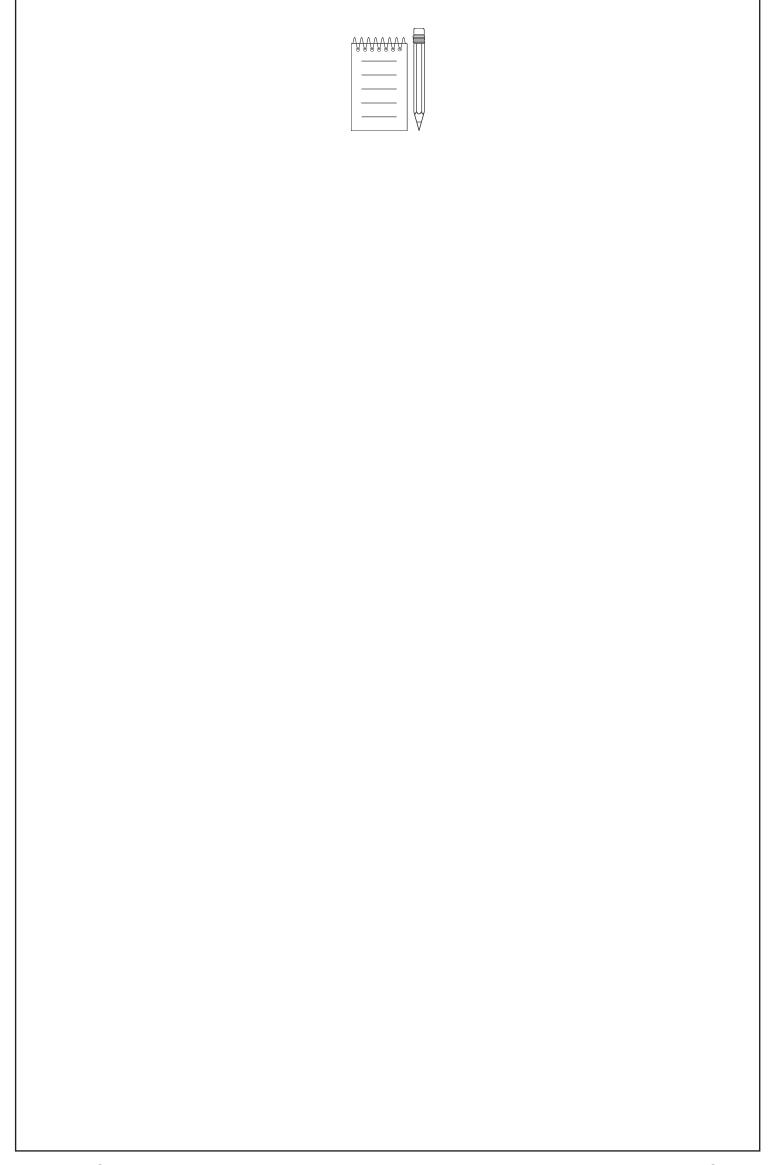

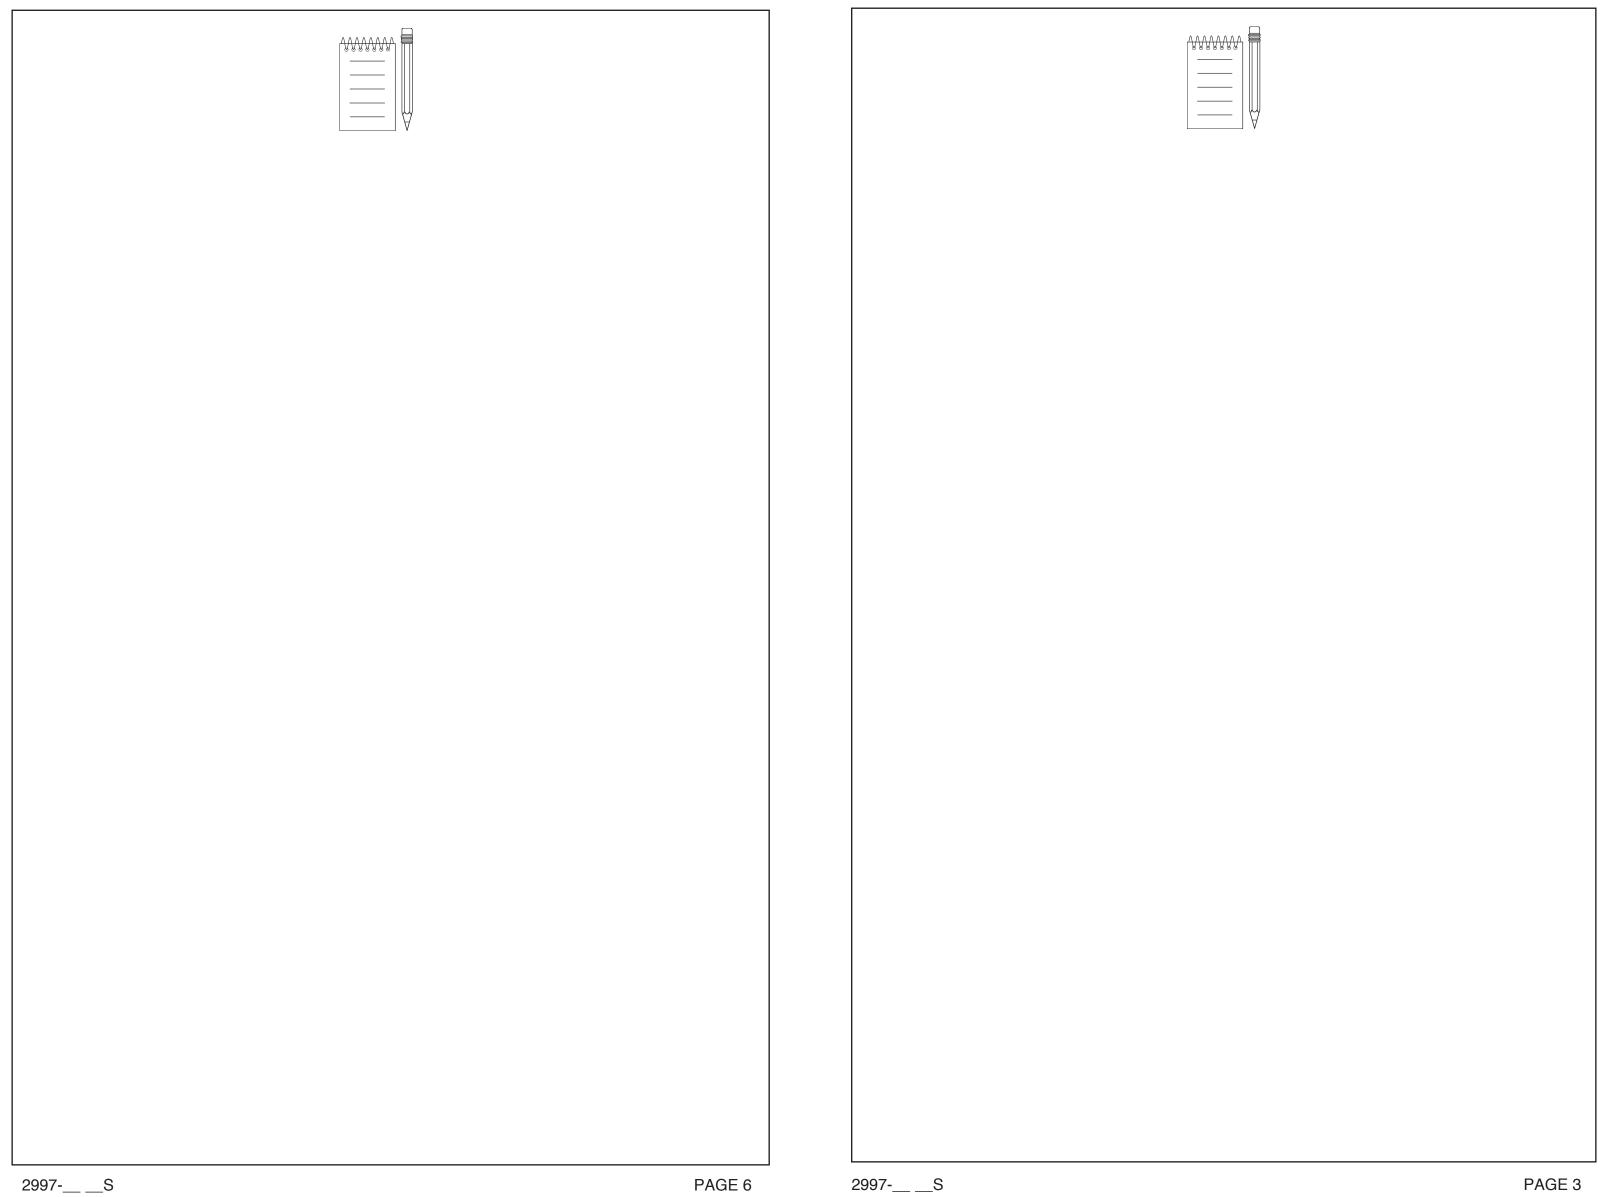

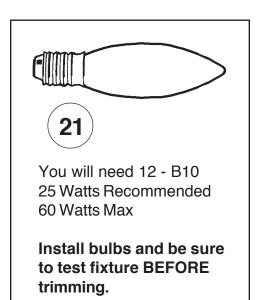

Install running thread and lock with set screw. ALTERNATELY install two different arms into washer. Line up holes in arms with dimple in washer. Use lock washer and nut to secure arms in place.


Connect ground wire in each arm to ground wire in center column. NO MORE THAN 5-WIRES PER WIRE NUT. Use electrical tape to secure wire nuts.

Connect white arm wires to neutral column wire (ribbed or marked is neutral).

Connect black arm wires to the power wire in column.

Carefully press wires as close as possible to the underside of washer.

Attach glass assembly with rosette and ball.

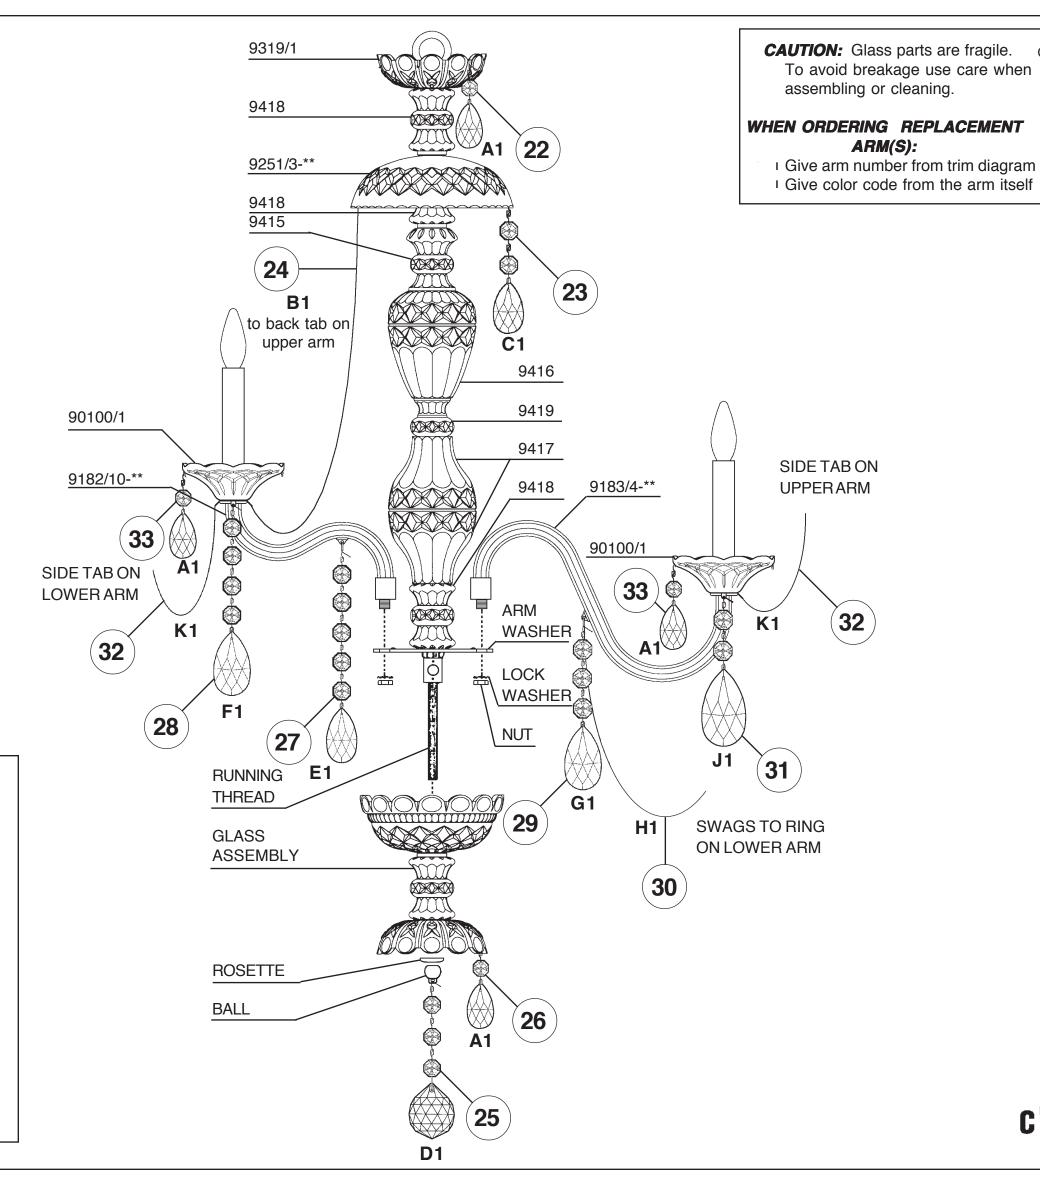



COLOR→