


## Instructions for electrician STEPS 2 - 21


15

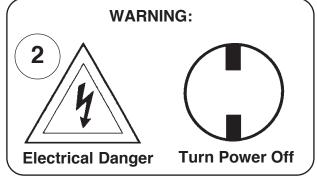


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

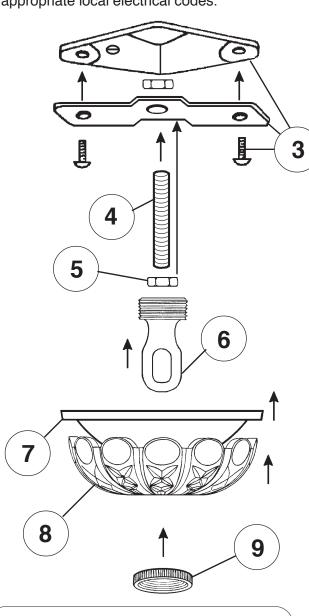

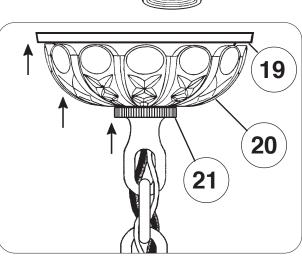

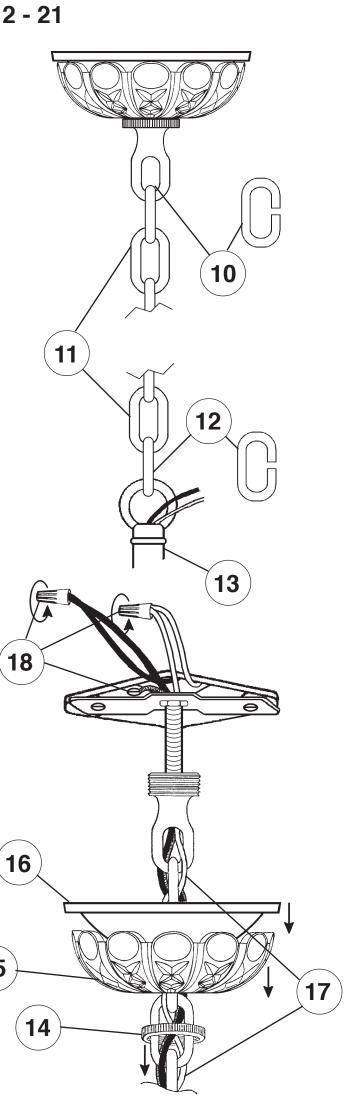




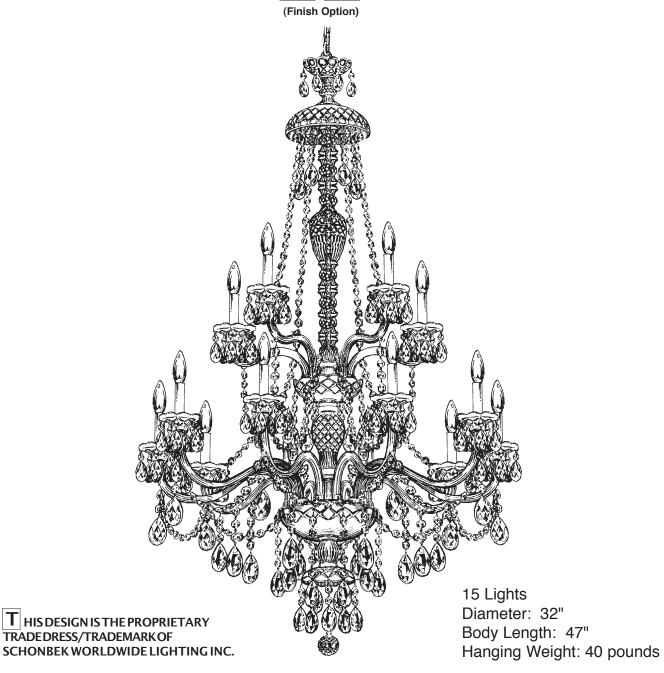

## **SCHONBEK**®


See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference

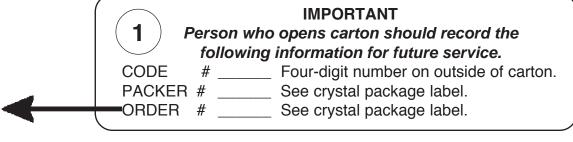

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE: #D5,404,285,#D5,460,269,#D5,873,652,#D336,537,#D338,278&#D339,879


## Instructions for crystal trimming STEPS 22 - 36



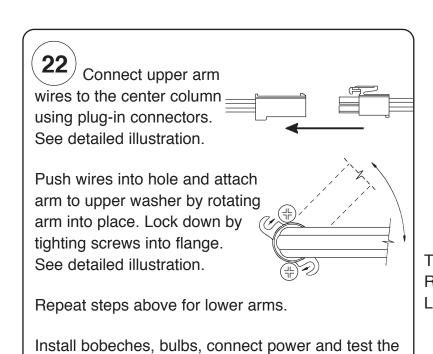

fixture before trimming. If any of the bulbs do NOT

light - DISCONNECT POWER. Double check the

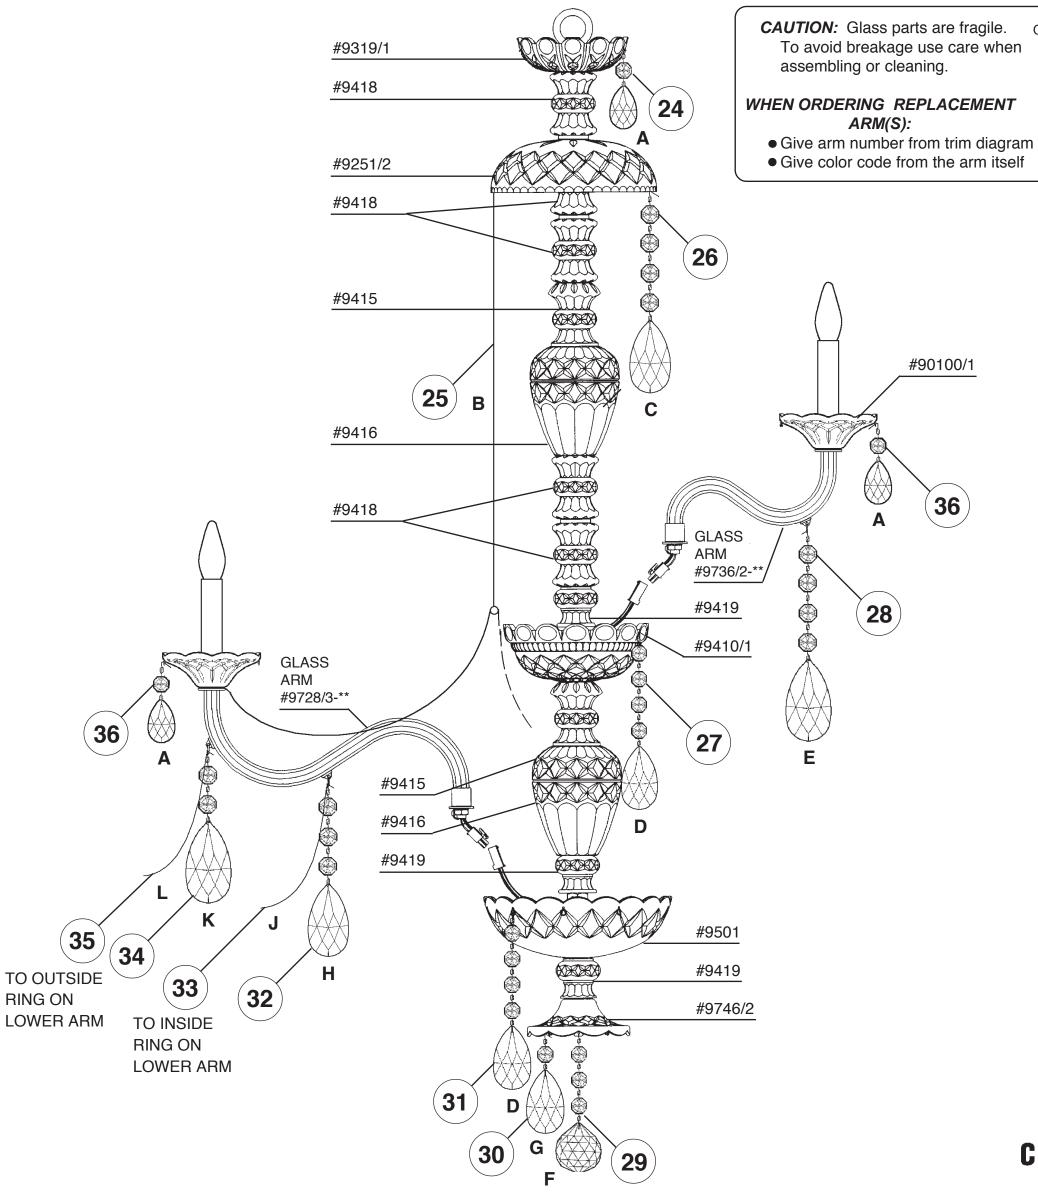



COLOR →

wire connections.