



CHANDELIER 1310- ___ H TRIM DIAGRAM

(Finish Option)

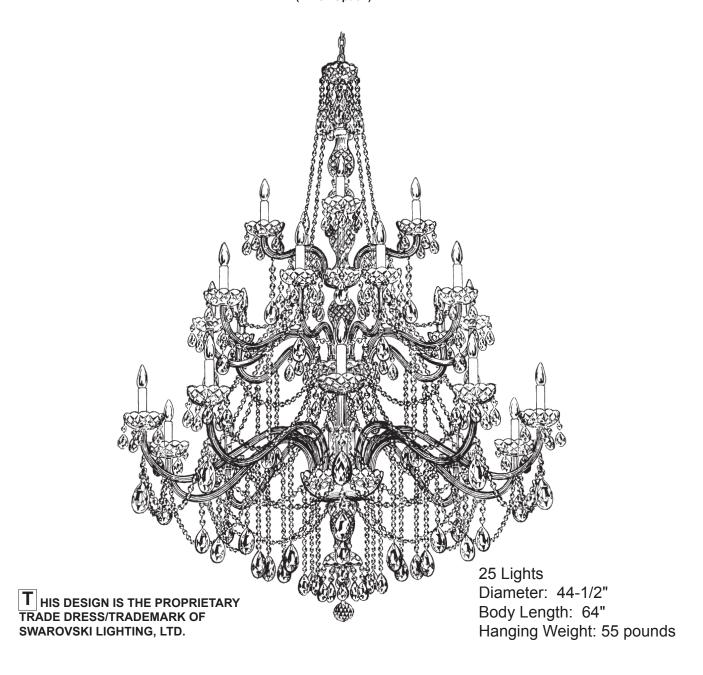


SCHONBEK®

See diagram on back page Follow steps in exact order Save this trim diagram for future reference

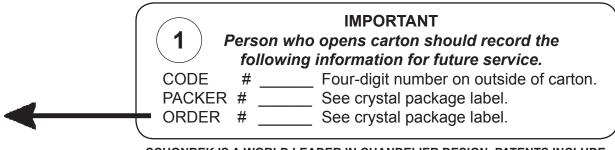


SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE: #5,460,269 & 5,873,652


Instructions for crystal trimming STEPS 22 - 41

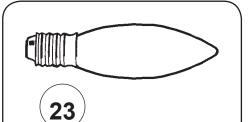

You will need 25 - B10 25 Watts Recommended 60 Watts Max

Install bulbs and be sure to test fixture BEFORE trimming.

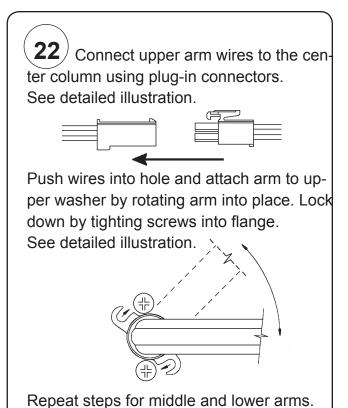

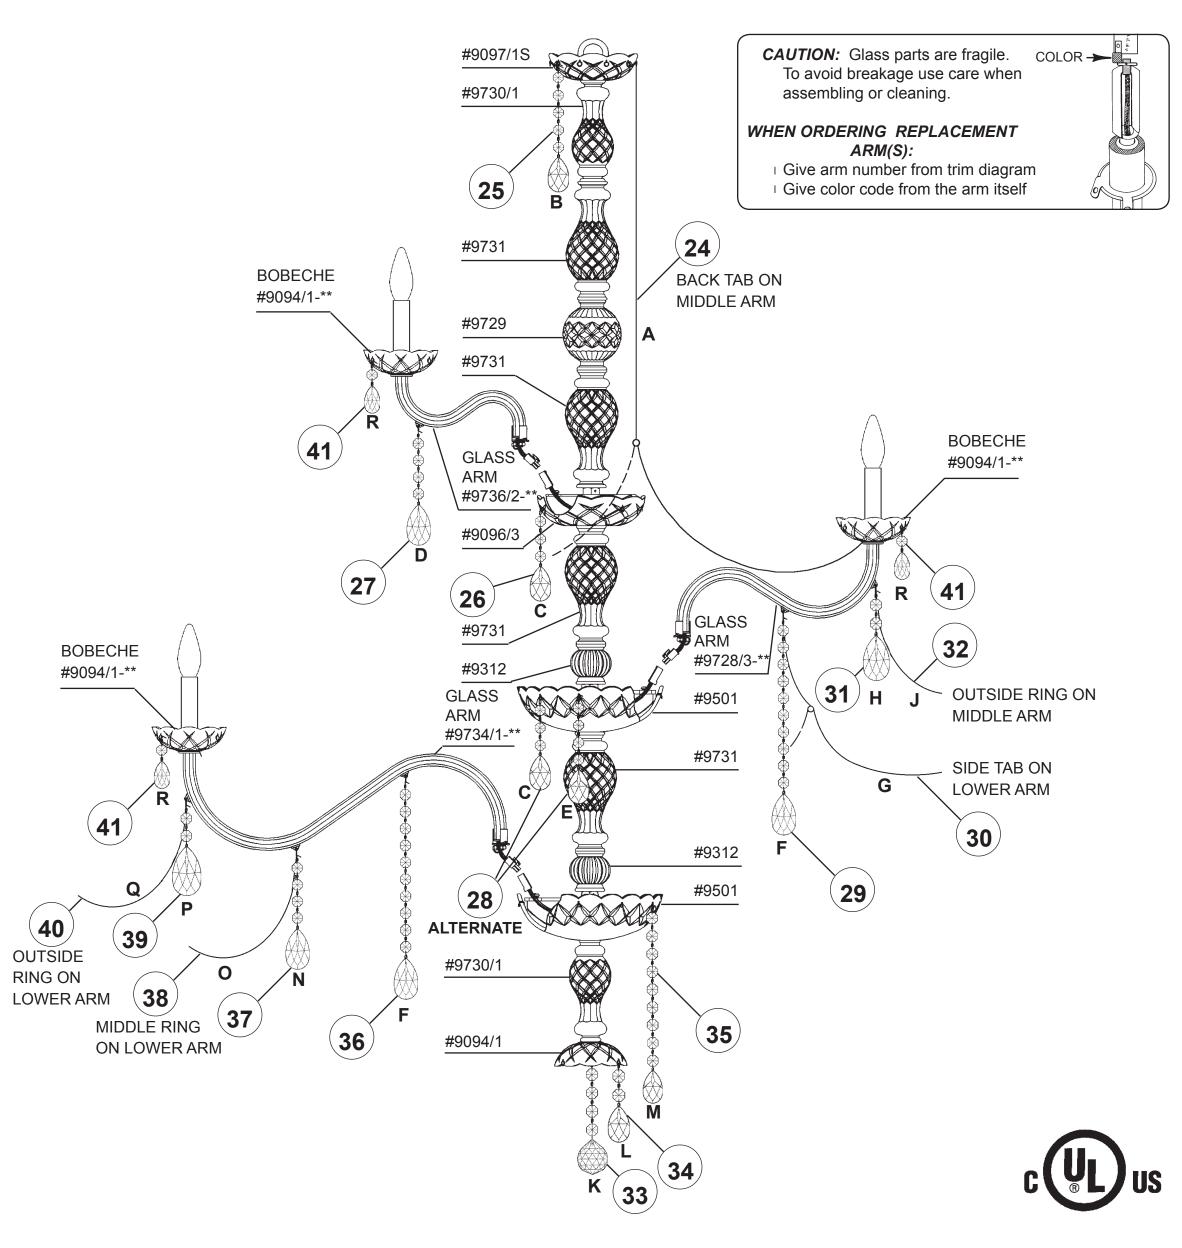

Install bobeches.