


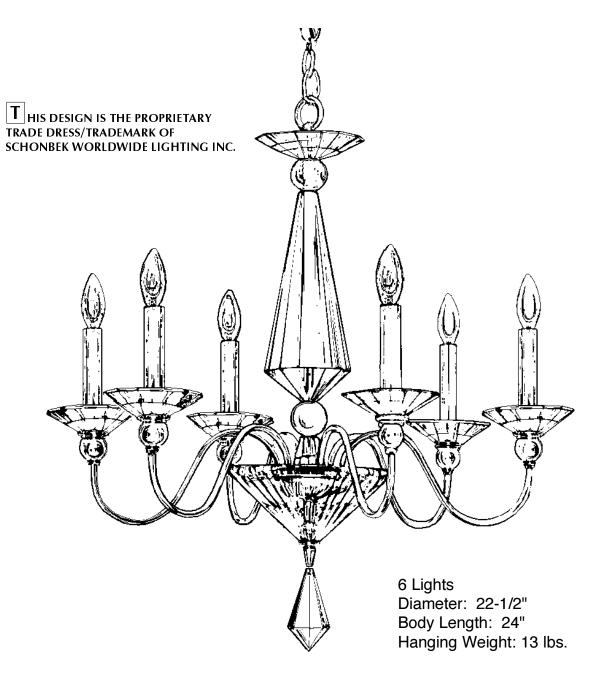


(Finish Option) (Trim Option)




## **SCHONBEK**®

See diagram on back page Follow steps in exact order Save this trim diagram for future reference

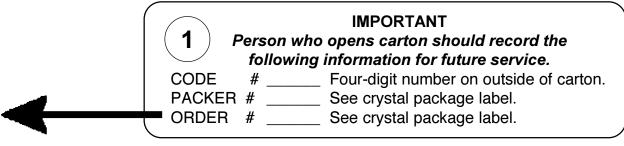

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE: #D515,727 & #D515,728

## Instructions for crystal trimming STEPS 22 - 26



**(26)** 

You will need 6 - C10 25 Watts Recommended 60 Watts Max

Install bulbs and be sure to test fixture BEFORE trimming.

