

CHANDELIER 6807- _____ S TRIM DIAGRAM

(Finish Option)



THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF SCHONBEK WORLDWIDE LIGHTING INC.

2 Lights
Diameter: 14-1/2"
Body Length: 16"
Extension: 6"

SCHONBEK®

This crystal chandelier was designed and manufactured in Plattsburgh, N.Y. Our high-quality crystal fixtures are made with state-of-the-art manufacturing equipment. If you have any questions about this or any of our more than 450 crystal products, contact your nearest authorized Schonbek distributor.

CAUTION... RISK OF ELECTRICAL SHOCK. Make sure the electrical supply to the chandelier is turned off at the main fuse or circuit breaker before doing any installation. All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

HANGING WEIGHT: 5 pounds.

BULBS: 2 - Candle shaped candelabra base C10 bulbs, recommend 25 watts for best appearance.
60 - Watts Maximum

WARNING: This chandelier meets UL/CSA requirements. Any tampering will void UL/CSA certification.

MAINTENANCE:

Use a soft, lint free cloth to clean the metal frame.

UNDER NO CIRCUMSTANCES SHOULD METAL POLISHES, CLEANERS, ABRASIVES OR AEROSOL SPRAYS BE USED.

While the latest finishing techniques have been used on the metal frame, such finish cannot be unconditionally guaranteed. The main cause of deterioration, apart from certain atmospheric conditions, is improper cleaning.

To clean the crystals, polish with a damp chamois.

You are cleaning delicate crystal... Take the greatest care.

IMPORTANT:

Do not clean crystals in a dishwasher. The finish of the metal clips and hangers will be ruined and the crystals may be damaged.

1

IMPORTANT

Please record the following information for future service.

CODE	# _____	Four-digit number on outside of carton.
PACKER	# _____	See crystal package label.
ORDER	# _____	See crystal package label.

CAUTION: Glass parts are fragile. To Avoid breakage use care when assembling or cleaning.



2 MAKE SURE THAT POWER TO THE OUTLET BOX IS DISCONNECTED!!

3 Thread long screw "A" through crossbar "B" and attach crossbar to outlet box using 2 screws round head 8-32 x 1" (not supplied with wall bracket.)

4 Test fit wall bracket by guiding it over screw "A". Adjust screw "A" so that it extends approximately 1/4" through wall bracket. Remove wall bracket. Thread nut "C" onto screw and tighten it against crossbar. (NOTE: In some installations, due to space, nut "C" might have to go on the other side of the crossbar.)

6 Connect the wires of the wall bracket to the power wires of the outlet box, guide wall bracket over screw "A" and secure with threaded half ball supplied. NOTE: Fixture MUST be grounded.


7 Install bobeches and screw bulbs into all sockets(s). Test power to insure proper wiring before hanging trim from fixture.

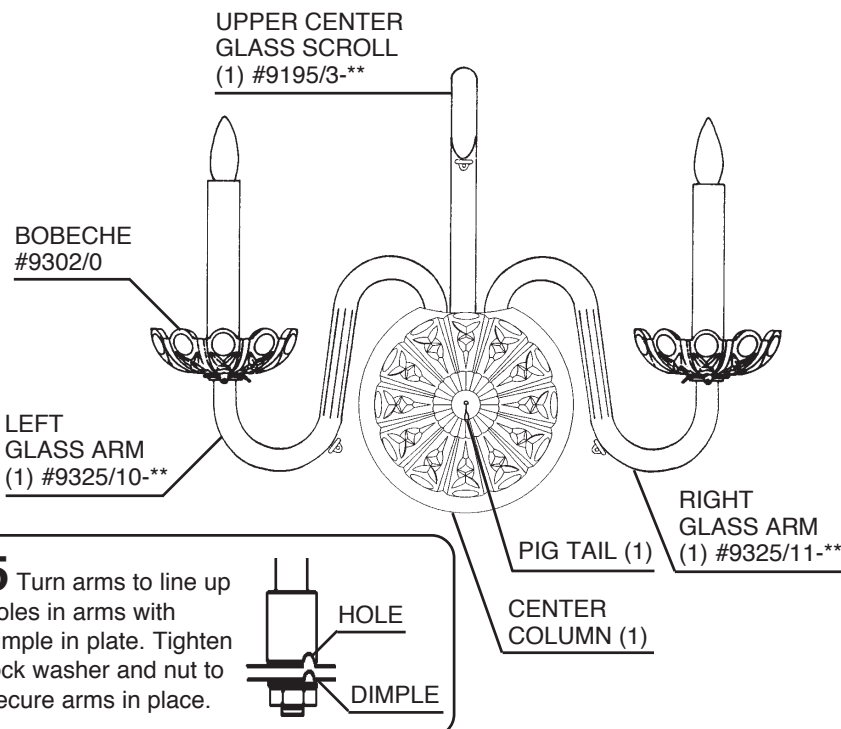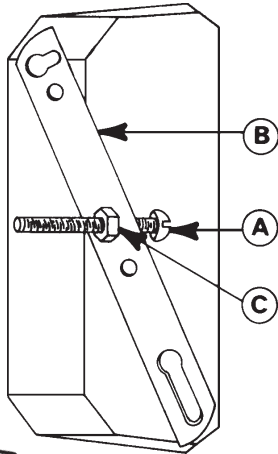

5 Turn arms to line up holes in arms with dimple in plate. Tighten lock washer and nut to secure arms in place.




SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE: #D5,460,269

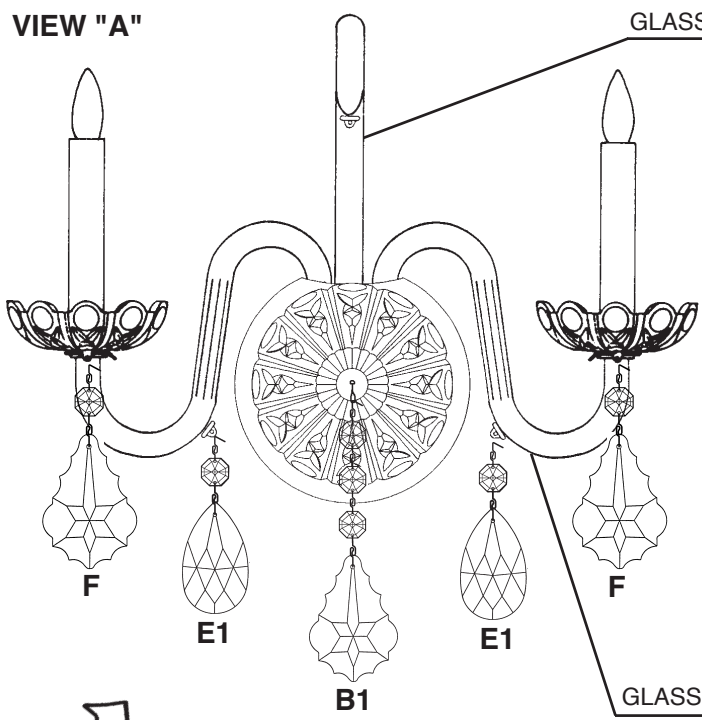

11 Hook Drop "C1" into the ring on the glass scroll. See View "B".


12 Hook Chains "D" into the rings of Drop "C1" and into the side tabs under the bobeches. Chains "D" are swagged between the glass scroll and the glass arms. See View "B".

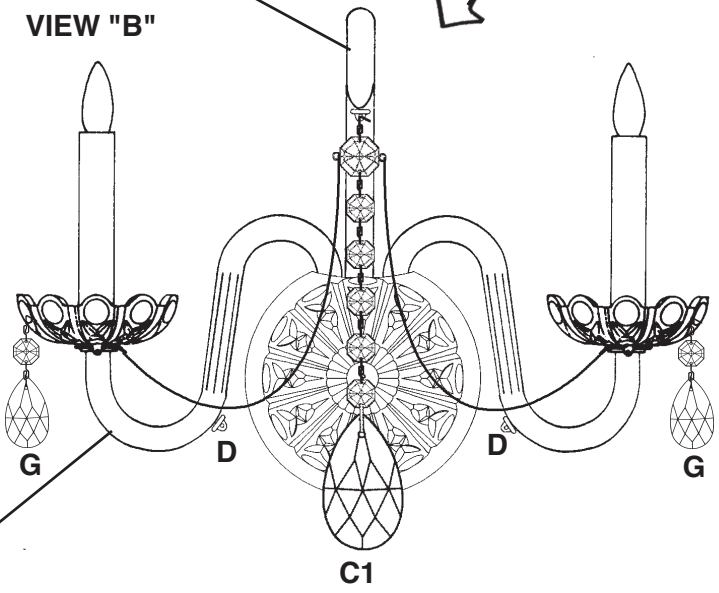

8 Hook Drop "B1" into the pig tail on the center column. See View "A".

9 Hook Drops "E1" into the lower ring on the glass arms. See View "A".

10 Hook Drops "F" into the front tabs under the bobeches. See View "A".

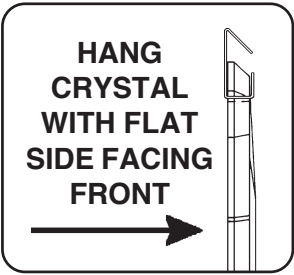

13 Every bobeches is trimmed with Drops "G", suspended from every hook between the scallops. See View "B".