



CHANDELIER 1310- ____H TRIM DIAGRAM

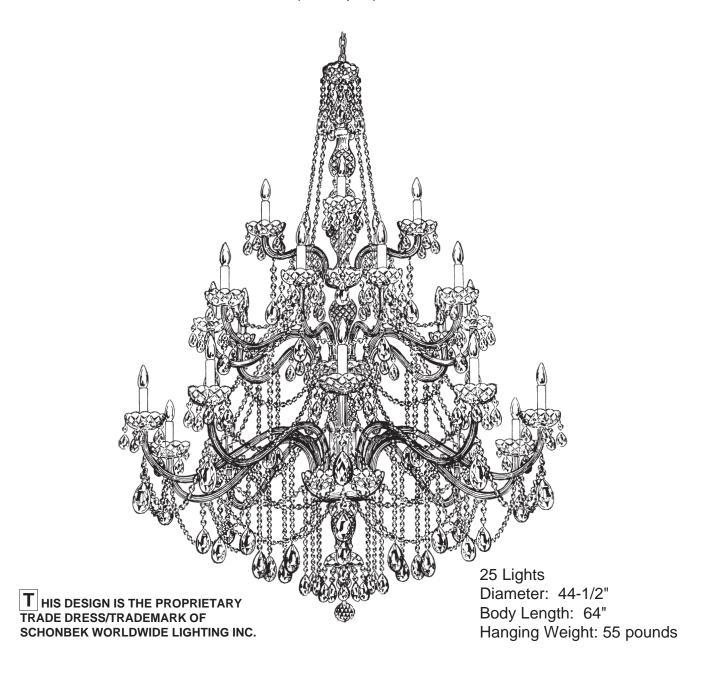


SCHONBEK®

See diagram on back page Follow steps in exact order Save this trim diagram for future reference

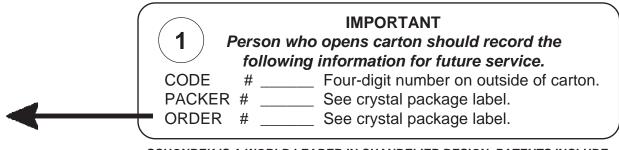


SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE: #D5,460,269 & D5,873,652

Instructions for crystal trimming STEPS 22 - 41

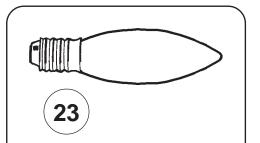


You will need 25 - B10 25 Watts Recommended 60 Watts Max

Install bulbs and be sure to test fixture BEFORE trimming.





Push wires into hole and attach arm to upper washer by rotating arm into place. Lock down by tighting screws into flange. See detailed illustration.

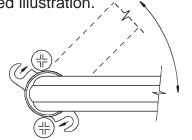

Repeat steps for middle and lower arms. Install bobeches.

